

FAST LAG SCREW (FX)

NO HAMMERING REQUIRED

The MacLean FX series of lag screws provides an easy and speedy install for the lineman.




KEY FEATURES

- Type 17 tip that drills its own hole
- Hex head that fits with common 3/4" sockets
- Aggressive thread for easy drilling
- Half-inch diameter shoulder for snug fit with assembled components
- Hot dipped galvanized
- No hammering required! Designed for power tools found on utility trucks
- Over 20% higher pull-out strength compared to traditional lags
- Can replace gimlet, fetter and twist drive lag screws

CONFORMS TO THESE STANDARDS

- ANSI C135.80
- ANSI C135.3
- ASTM A 307
- ASTM A 153
- RUS Section "j"

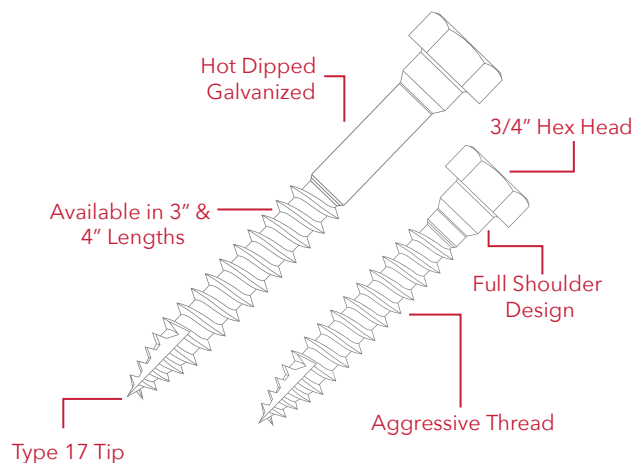

CATALOG NUMBER	DESCRIPTION	HEX HEAD	CARTON QTY
J8753FX	1/2" x 3" Lag Screw	3/4"	250
J8754FX	1/2" x 4" Lag Screw	3/4"	250