

# **Universal Ground Strap SI-0958**

(Patented, UL & CUL Listed)


## **Installation Instructions:**


SI-0958 Universal Ground Straps were specifically designed to upgrade and facilitate the installation of bonding a copper ground wire to a copper pipe, galvanized pipe or service mast from existing ground strap designs.

- **Step 1:** Position ground strap inner curvature against pipe.
- **Step 2:** Wrap ground strap around pipe and engage mounting hole on ground strap closest to side hook.
- Step 3: Back-off ground nut fully toward head of mounting screw.
- **Step 4:** Tighten mounting screw to firmly secure ground strap around pipe using SI-7195 Tool 3/8" size. DO NOT OVER TIGHTEN.
- **Step 5:** Insert up to a #10 AWG copper ground wire under the retainer washer and tighten ground nut firmly to secure the ground wire using SI-7195 Tool 7/16" size.
- **Step 6:** Back fold any excess ground strap.





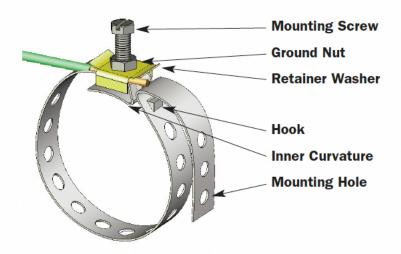

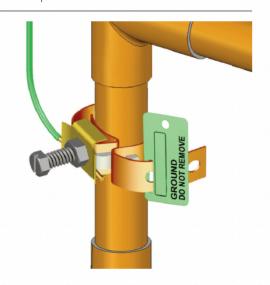

### **Ordering Information**

SI-0958-6 Ground Strap Copper - 6" in length
SI-0958-6 Ground Strap Galvanized - 6" in length
SI-0958-9 Ground Strap Galvanized - 9" in length
SI-0958-9 Ground Strap Galvanized - 9" in length
SI-0958-12 Ground Strap Galvanized - 12" in length

## For technical assistance or to request samples, please call 800-350-1650

#### **MacLean Network Solutions**

610 Pond Drive Wood Dale, IL 60191

Phone: 800-350-1650

Email: Sales@macleansenior.com Website: www.macleannetworksolutions.com