


# Pipe Ground Clamp

Model #: SI-5948G

## Installation Instructions:

- Step 1:** Mount the ground clamp to the galvanized or copper pipe and conduit. Usable pipe sizes: 1/2" 3/4" or 1".
- Step 2:** Tighten the two side slotted hex head screws firmly to secure the ground clamp to the pipe using a slotted tip screwdriver or SI-7195 tool - 7/16" hex size.
- Step 3:** Release top set-screw and insert the copper ground wire into the ground wire slot. Tighten set screw firmly to secure the ground wire using a slotted tip screwdriver or SI-7195 tool - 7/16" hex size.

Wire Range CU Conductor	Tightening Torque IN-LBS
#6 AWG Stranded	35
#14 AWG Solid	30

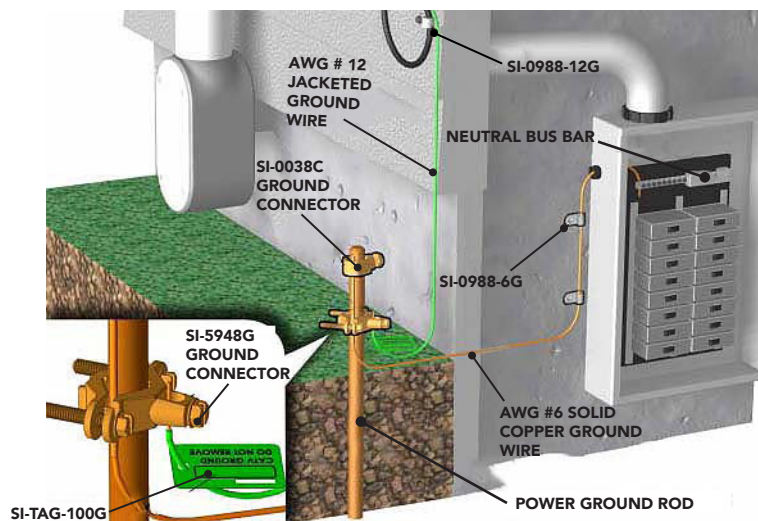

### MacLean Network Solutions

610 Pond Drive Wood Dale, IL 60191

Phone: 800-350-1650

Email: Sales@macleansenior.com

Website: www.macleannetworksolutions.com

MacLean Network Solutions All rights reserved.

09/21/2021